



X-Series

Perfect sound all along the line

These beautiful speaker pillars inspire with a wide sound stage, clear voices, natural timbre and powerful bass. Experience music of all kinds up close in your home.

TECHNOLOGY

For audiophiles by audiophiles


The SONOX loudspeakers were developed from the ground up by the Swiss high-end manufacturer ROWEN. Three key principles were incorporated into these exceptional loudspeakers.



01 - SEALED CABINET

Closed for more

Acoustic Suspension guarantees particularly deep and, above all, very precise bass. Thanks to exceptionally accurate bass reproduction, SONOX speakers can be placed in the living room with ease.

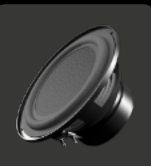

02 - SUB-BASS SYSTEM

Low bass - done right

The sub-bass system is a new development and also a typical ROWEN solution. Without the typical disadvantages of conventional bass-reflex resonance tuning, this closed system guarantees a bass that is both deep and powerful.



03 - HIGH-END TWEETER

Open upwards

The audiophile ROWEN tweeter system delivers outstanding resolution starting at 4.5 kHz, while an ultra-fast driver below ensures excellent soundstaging and exceptional homogeneity.



CONTACT
SONOX by ROWEN
+41 26 466 73 73
info@rowen.ch
sonox.ch



SONOX
FOR AUDIOPHILES × BY AUDIOPHILES

SWISS ENGINEERED BY ROWEN

Q-Series

Bringing the concert to *your home*

The Q Series brings high-end sound within your reach. Experience your favourite band at home as if you were at a concert.



MODEL	Q30	Q80	Q110	X55	X100	X150
CONFIGURATION	2.5-way	2.5-way	3-way	2.5-way	2.5-way	3-way
TWEETER / WOOFER	18 mm / 130 mm	18 mm / 130 mm	18 mm / 130 mm	18 mm / 130 mm	18 mm / 130 mm	18 mm / 130 mm
SUB-BASS	1	1	4	1	2	4
FREQUENCY [Hz]	45-24k	29-24k	25-24k	45-24k	29-24k	26-24k
EFFICIENCY [dB]	89	89	89	89	89	89
IMPEDANCE [Ω]	6	6	6	6	6	6
H×W×D [CM]	29×17.5×24	86×17.5×22	104×17.5×24	55×18×12	103×18×18	153×18×18
FINISHES						

